


Operation panel

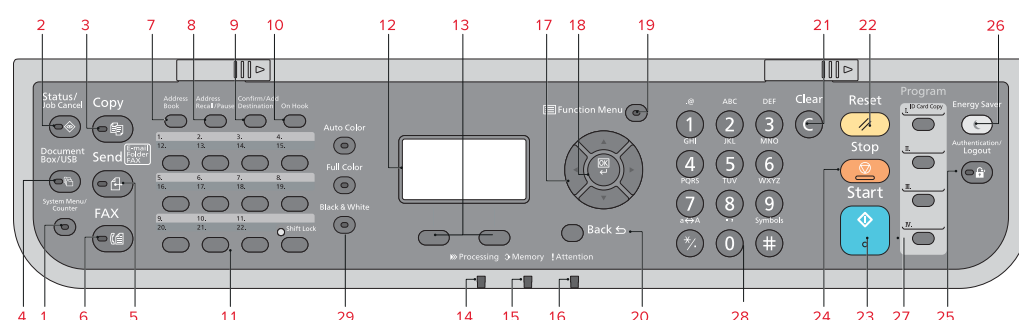

- 1 Displays the System Menu/Counter screen.
- 2 Displays the Status/Job Cancel screen.
- 3 Displays the Copy screen.
- 4 Displays the Document Box/USB screen.
- 5 Displays the Send screen. You can change it to display the Address Book screen.
- 6 Displays the Fax screen.
- 7 Displays the Address Book screen.
- 8 Calls the previous destination. Also used to enter a pause when entering a fax number.
- 9 Confirms the destination or adds a destination.
- 10 Switches between on-hook and off-hook when manually sending a fax.
- 11 Recalls the destination registered for One Touch Keys.
- 12 Displays the setting menu, machine status, and error messages.
- 13 Message Display. Check what is shown here while operating the machine.
- 14 Blinks when printing or sending/receiving.
- 15 Blinks while the machine is accessing the machine memory, fax memory or USB memory (general purpose item). Switch off the machine only when LED is dark!
- 16 Lights or blinks when an error occurs and a job is stopped.
- 17 Used to select a menu item, move the cursor when entering characters, change a value etc.
- 18 Selects the chosen item or finalises the entered value.
- 19 Displays the function menu for copy, print, transmission and document box.
- 20 Returns the Message Display to the previous screen.
- 21 Clears entered numbers and characters.
- 22 Resets settings and displays the basic screen.
- 23 Starts copying and scanning operations and processing for setting operations.
- 24 Cancels the printing job in progress.
- 25 Authenticates user switching, and exits the operation for the current user (i. e. log out).
- 26 Puts the machine into Sleep Mode. Recovers from Sleep if in Sleep Mode.
- 27 Used to register or recall programs.
- 28 Numeric keys. Enter numbers and symbols.
- 29 For the selection of the copy mode between Auto Color, Full Color and Black & White (only for P-C3060/P-C3065 MFP).



Depending on the model in use not all functions are available.


For more details refer to the Operation Guide on the co-packed DVD.

Copy operation

Paper source selection




- 1 Press **COPY**.
- 2 Press **PAPER** using the select keys below the message display.
- 3 Press **ARROW UP/DOWN** to select cassette or multi-purpose tray.
- 4 Confirm with **OK**.

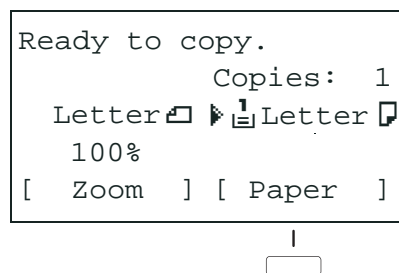

Quiet Mode


- 1 Press **QUIET** using the select keys below the message display. Select the setting to reduce the noise for scanning and copying.
- 2 Confirm with **OK**.
- 3 Press **START** to start copying.

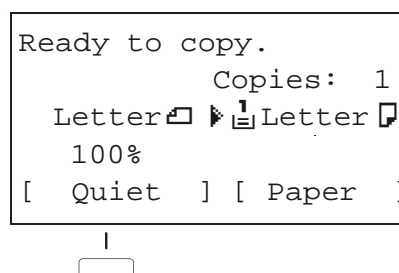

Convenient copy functions


Change the following settings if needed:
DUPLEX, **COLLATE**, **COMBINE**, **ORIGINAL SIZE/-ORIENTATION**, **COLOR SELECTION***, **COLOR BALANCE*** and **DENSITY**.

- 1 Press **FUNCTION MENU**.
- 2 Use **ARROW UP/DOWN** to choose the desired function.
- 3 Confirm with **OK**.
- 4 Change the desired settings. Confirm all settings with **OK**.
- 5 Press **START** to start copying.

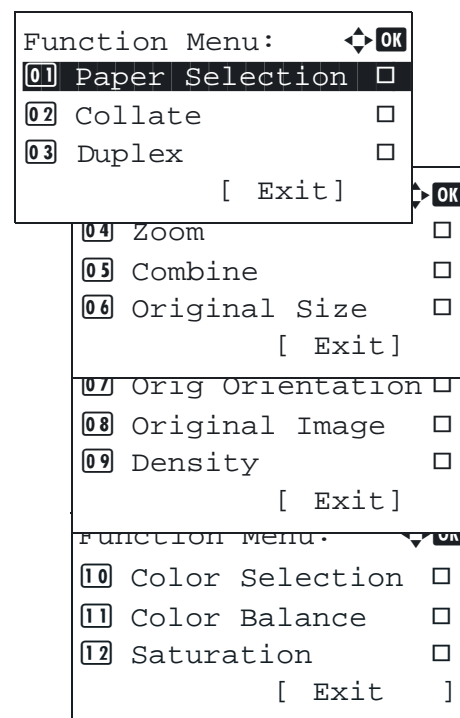

Registering settings to program key


- 1 Change the current settings as desired.
- 2 Press one program key for 3 seconds.
- 3 The destination registered to the program keys is recalled and automatically entered on the screen.

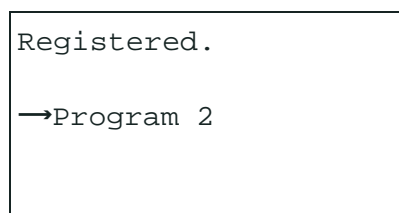

* Only P-C3060/P-C3065 MFP

Send operation

Sending E-mail

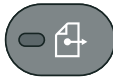

- ① To wake up the device press the button **ENERGY SAVER**.
- ② Place the documents on the platen or in the document processor.
- ③ Press **SEND**.
- ④ Use **ARROW UP/DOWN** to select **[E-MAIL]**.
- ⑤ Confirm with **OK**.
- ⑥ Enter the destination e-mail address. Use **ABC TEXT** to select the type of characters. Use **LEFT/RIGHT ARROW** to move the cursor.
- ⑦ Confirm with **OK**.
- ⑧ If there are additional destinations, press **ADD DESTINATION**.
- ⑨ Press **CONFIRM DESTINATION** to confirm the registered destinations.
- ⑩ Press **START**. Transmission starts.

Send to: OK

01 E-mail

02 Folder(SMB)

03 Folder(FTP)

Address Entry: OK

ABC

[Text]

|

Ready to send.

Dest.: 1

:sally@#####...

1-sided 300x300dpi

[Duplex] [ScanRes.]

Check transmission result



- ① Press **STATUS/JOB CANCEL**.
 - ② To check received documents use **ARROW UP/DOWN** and select **PRINT JOB STATUS**.
- To check send documents use **ARROW UP/DOWN** and select **SEND JOB STATUS**.
- ③ Confirm with **OK**.
 - ④ Use **ARROW UP/DOWN** to select the desired job.
 - ⑤ The result is displayed. Press **[DETAIL]** to view all related items.

Send Job Log: OK

0004 Broadcast OK

0003 0756545865 OK

0002 Morgan@home... !

[Detail]

Cancelling fax job



If the documents are still fed, press **STOP**.

- ① Press **STATUS/JOB CANCEL**.
- ② Use **ARROW UP/DOWN** to select **SEND JOB STATUS**.
- ③ Confirm with **OK**.
- ④ Use **ARROW UP/DOWN** to select the job to be cancelled.
- ⑤ Press **CANCEL** using the select keys below the message display.
- ⑥ Confirm with **YES** using the select keys below the message display. Communication is cancelled. A confirmation slip might be printed.



Send Job Status: OK

0010 0123456789

0011 Broadcast

0017 9876543210

[Cancel] [Menu]

|

Sending Fax



- 1 Press **ENERGY SAVER**.
- 2 Place the originals on the platen or in the document processor.
- 3 Press **FAX**.
- 4 Press **FAX RES.** using the select keys below the message display. Select the resolution suitable for sending originals and confirm with **OK**.
- 5 Enter the fax number of the receiving system using the numeric keys.

You can also select the fax destination from the addressbook by pressing **ADDRESSBOOK**.

- 6 Press **START**. The documents are fed and the transmission begins.

Ready to send.
2010/05/25 12:30

Text+Photo 200x100dpi
[Orig.Img] [FAX Res.]

|
[]

Registering a new destination

- 1 Press **SYSTEM MENU/COUNTER**.
- 2 Use **ARROW UP/DOWN** to choose **EDIT DESTINATION**.
- 3 Press **OK**.
- 4 Use **ARROW UP/DOWN** to choose **ADDRESSBOOK**.
- 5 Confirm with **OK**.

If the addressbook contains no entries, press the menu key using the select keys below the message display.

- 6 Use **ARROW UP/DOWN** to choose **ADD ADDRESS**.
- 7 Choose **CONTACT** and confirm with **OK**. Next, enter destination name, fax number and e-mail address.
- 8 Press **EDIT** to see more details. Use **LEFT/RIGHT ARROW** to select the items.
- 9 Confirm each entry with **OK**.

Edit Destination: [OK]
[01] Addressbook
[02] Print List

[Exit]

Menu: [OK]
[01] Detail Edit
[02] Delete
[03] Add Address

Detail: [OK]
Contact Name 1/7

[Edit]

Registering a new One-touch key

- 1 In the basic screen for fax, press the **ONE-TOUCH** key that you want to register and hold it (2 seconds).
- 2 Use **ARROW UP/DOWN** to choose a key.
- 3 Confirm with **OK**.
- 4 Use **ARROW UP/DOWN** to choose an entry from the addressbook.
- 5 Confirm with **OK**.

Select Key No.: [OK]
[01] No. 1
[02] No. 12

[Exit]