

E-Mail operation

Sending



- 1 To wake up the device press the button **ENERGY SAVER**.
- 2 Place the originals on the platen or in the document processor.
- 3 Press **SEND** on the Home screen.
- 4 Enter the destination address.

From the address book:

Press **ADDRESS BOOK**. Press the check-box to select the desired destination from the list. Press **Q**, to find the destination. Enter the name you search for. Confirm with **OK**.

You can also press **MENU** to perform a more detailed search.

You may choose multiple destinations.

Enter an e-mail address:

 
 
Press **E-MAIL**. Enter the e-mail address on the touch screen. After that press **OK**.

If you want to send the e-mail to several destinations press **NEXT DEST.**.

Enter a fax number:

Press **FAX** on the touch screen. Press **ADD DEST.**. Enter the fax number in the destination field.


- 5 To start transmission press **START**.

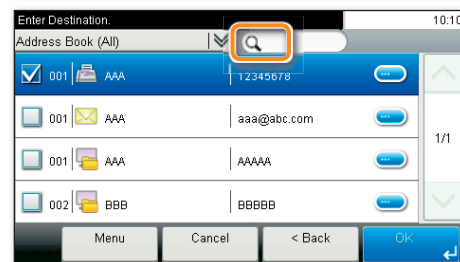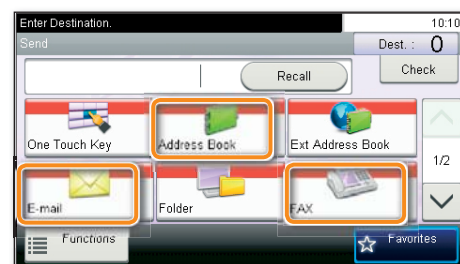

Scan settings



 - 1 Press **SEND** on the Home screen.
- 2 Press **FUNCTIONS**.
- 3 Choose the items to be changed by opening the related submenu.
- 4 Confirm with **CLOSE**.

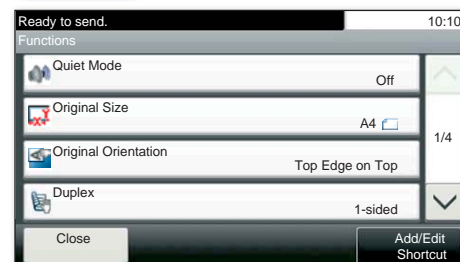

Depending on the model in use not all functions are available.

For more details refer to the Operation Guide on the co-packed DVD.

Fax operation

 
Cancelling sending job



If the documents are still fed, press **STOP**.

- 1 Press **STATUS/JOB CANCEL**.
- 2 Press **SEND JOB STATUS**.
- 3 Choose the job to be cancelled and press **CANCEL**.
- 4 Confirm with **YES**.



Communication is cancelled.

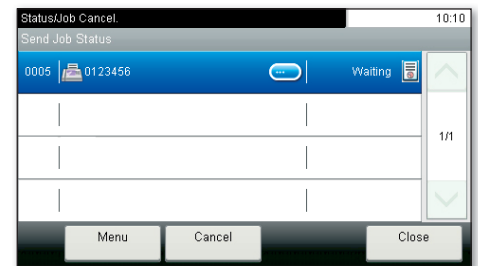

Check transmission result



 
 
- 1 Press **STATUS/JOB CANCEL**.
- 2 Press **SEND JOB LOG**.
- 3 The result is displayed.
- 4 Press to display more details of the selected transmission.

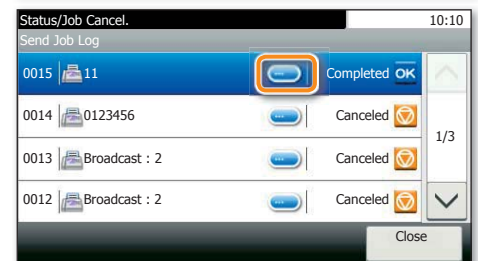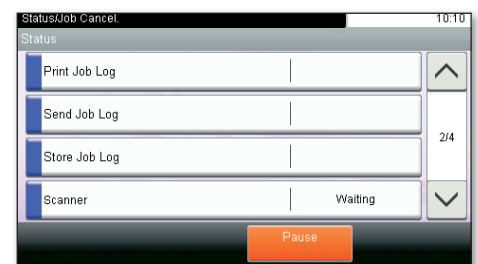

Using Favorites




  - 1 Press **FAVORITES** on the Home screen.
- 2 Select a favorite.
- 3 Make the desired settings.
- 4 Confirm the settings and start the job.

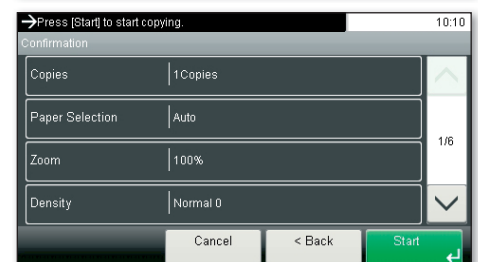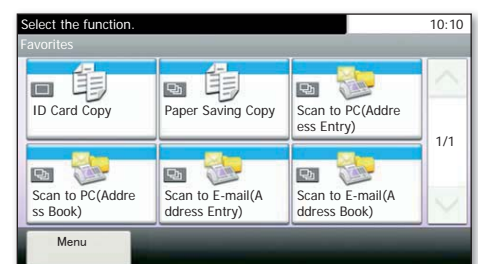


Print operation



 
Private printing



Note: To activate the private printing from the PC, select the **JOB** tab in the printer driver and click **PRIVATE PRINT**. The section **JOBNAME** allows you to type in your name directly.

- ① Press **DOCUMENT BOX** on the Home screen.
- ② Press **JOB BOX**.
- ③ Press **PRIVATE PRINT**.
- ④ Select the creator of the private print job.
- ⑤ Select the document to be printed from the list. If the document is password protected, type in the PIN with the **TEN-KEY** pad.
- ⑥ Press **PRINT** to start printing.

   
Note: By pressing  jobs can be cancelled.

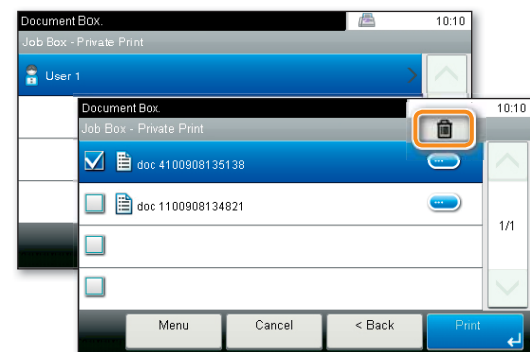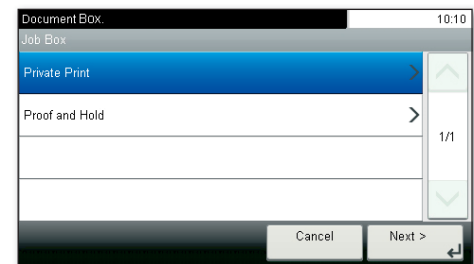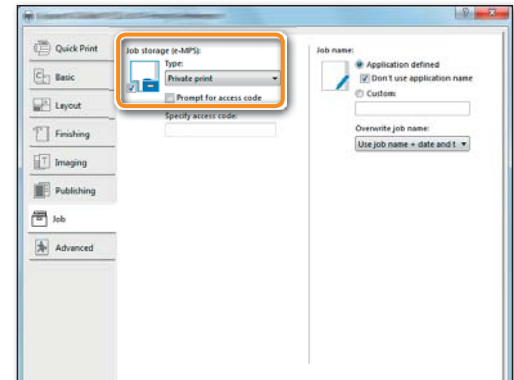

Cancel print job



 - ① Press **STATUS/JOB CANCEL**.
 - ② Press **PRINT JOB STATUS**.
 - ③ Select the job you wish to cancel and press **CANCEL**.
 - ④ Confirm with **YES**.
- Job is cancelled.

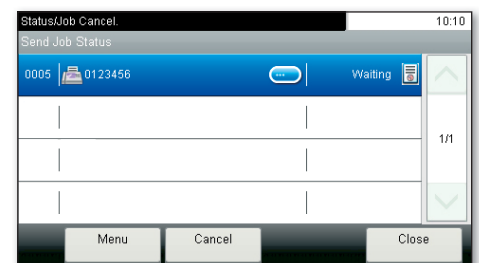

Copy operation

Prepare copy



- 1 To wake up the device press the button **ENERGY SAVER**.
- 2 Place the originals on the platen or in the document processor.
- 3 Press **COPY** on the Home screen.
- 4 Press **COLOR SELECTION*** to select the required copy mode.
- 5 Enter the number of copies with the **TEN-KEY** pad.

 
* Only P-C3560i/P-C3565i MFP



Optional Settings


Duplex

Press **DUPLEX** on the touch screen and select the desired function.

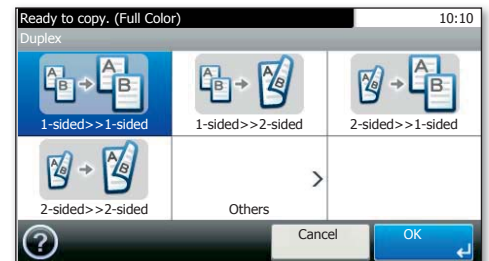


Changing paper source

 Press **PAPER SELECTION**. Choose the desired paper format. When using special sizes select the MP tray. Confirm your selection with **OK**.

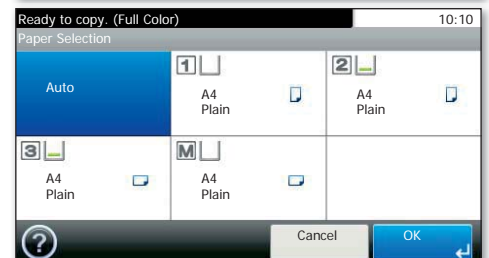

Reducing/Enlarging (Zoom)

 Press **ZOOM** on the touch screen. Select the original format and the target format or choose the zoom factor.

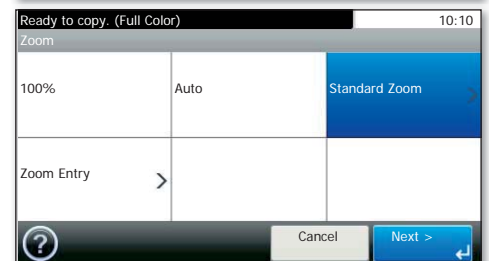

Quiet Mode

Press the button **FUNCTIONS**. Press **QUIET MODE** on the touch screen. Lower copy and scan speed for quiet processing. Select this mode when the running noise is uncomfortable.

All of above optional settings have to be confirmed with **OK**.

You may choose additional settings by pressing **FUNCTIONS** from the main menu.



- 6 Press **START** and the copy starts.