

E-Mail operation

Sending



- 1 Place the originals on the platen or in the document processor.
- 2 Press **SEND** on the Home screen.
- 3 Enter the destination address.

From the address book:

Press **ADDRESS BOOK**. Press the checkbox to select the desired destination from the list. Press **SEARCH (NAME)** to find the destination. Enter the name you search for. Confirm with **OK**.

 
You may choose multiple destinations.

Enter an e-mail address:

Press **E-MAIL ADDR. ENTRY** and **E-MAIL ADDRESS**. Enter the E-Mail address on the touch screen. After that press **OK**.

If you want to send the e-mail to several destinations, go back to step 3.


- 4 To send the e-mail press **START**.

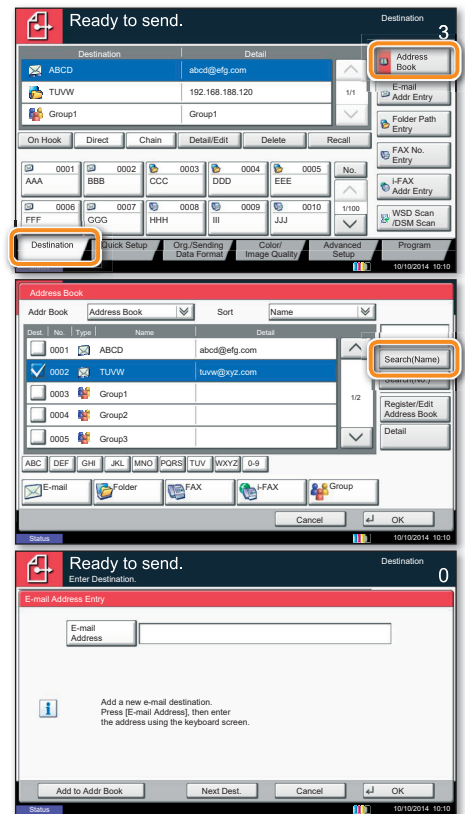

Scan settings



 - 1 Press **SEND** on the Home screen.
- 2 Press **COLOR/IMAGE QUALITY**.
- 3 Press **COLOR SELECTION**.
- 4 Choose the Color to be used.
- 5 Confirm with **OK**.

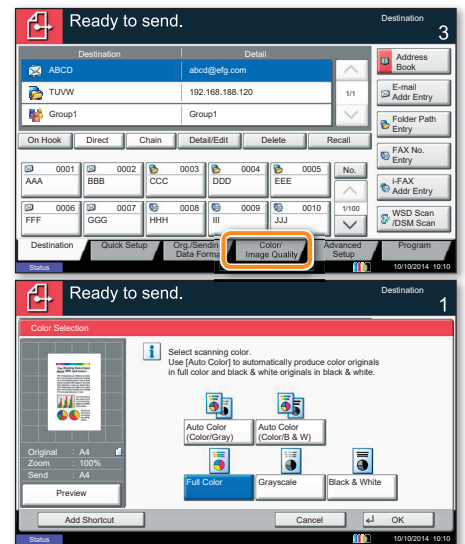

Further settings

 


- 1 Press **SEND** on the Home screen.
- 2 Press **QUICK SETUP**.

Choose an item to be changed. After changing confirm with **OK**.

To enter a file name press **ADVANCED SETUP**. Press **FILE NAME ENTRY** and change the name. Confirm with **OK**.

- 3 Press **DESTINATION** to return.

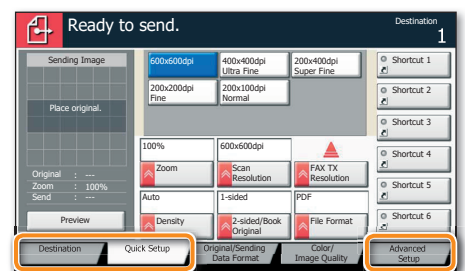

Fax operation

Sending a fax



- 1 Place the originals on the platen or in the document processor.
- 2 Press **FAX** on the Home screen.
- 3 Enter the destination address.

From the address book:

Press **ADDRESS BOOK**. Press the checkbox to select the desired destination from the list. Press **SEARCH (NAME)** to find the destination. Enter the name you search for. Confirm with **OK**.

 
You may choose multiple destinations.

Enter the destination:

Press **FAX.NO. ENTRY**. Enter the fax number with the **TEN-KEY** pad. After that press **OK**.

If you want to send the fax to several destinations, go back to step 3.

- 4 To send the fax press **START**.

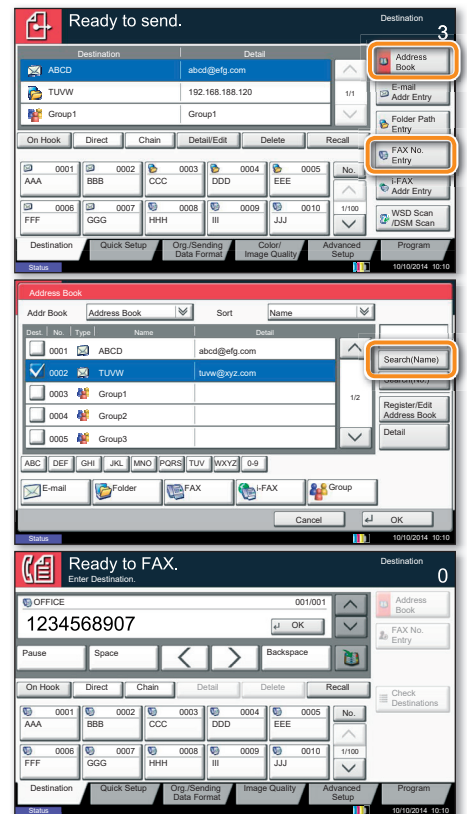

Cancelling fax job



 
From memory:

- 1 Press **STATUS/JOB CANCEL**.
- 2 Press **SENDING JOBS**.
- 3 Choose the job to be cancelled and press **CANCEL**.
- 4 Confirm with **YES**.

Communication is cancelled.

Direct transmission:

- 1 Press **STOP**.

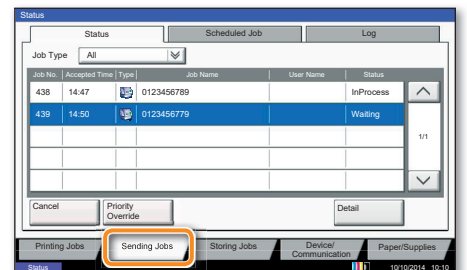


Check transmission result



- 1 Press **STATUS/JOB CANCEL**.
- 2 Press **SENDING JOBS**.
- 3 Under Job Type, select **FAX**.
- 4 Press **LOG**.
- 5 Select a job to be checked.
- 6 Press **DETAIL**.

 The details are displayed.

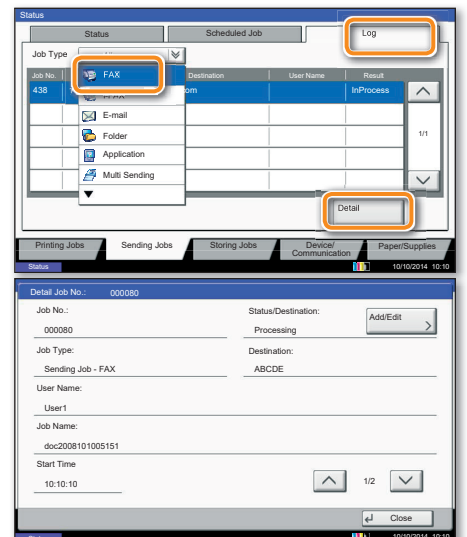

For more details refer to the Operation Guide on the co-packed DVD.

Print operation

 
 
 
Private printing



Note: To activate the private printing from the PC, select the **JOB** tab in the printer driver and click **PRIVATE PRINT**. Protect your print job with a 4-digit access code if needed. The section **CUSTOM** allows you to type in your name directly.

- 1 Press **JOB BOX** on the Home screen.
- 2 Select **PRIVATE PRINT/STORED JOB**.
- 3 Select the creator of the private print job.
- 4 Select the document to be printed from the list. If the document is password protected, type in the PIN with the **TEN-KEY** pad.
- 5 Press **PRINT** to start printing.

Note: By pressing **DELETE** jobs can be cancelled.

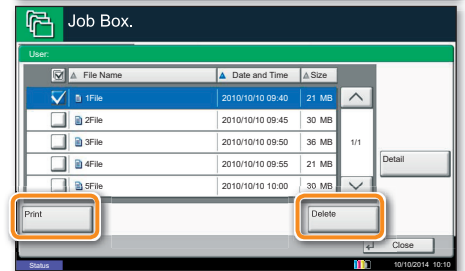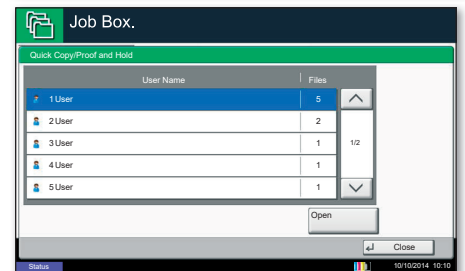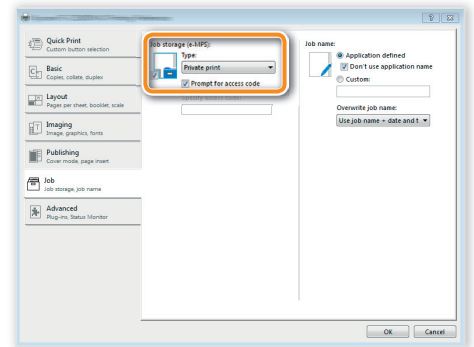

Color settings

 
- 1 When printing from an application press **PROPERTIES** button.
- 2 Choose **BASIC** tab.
- 3 Choose **COLOR: CMYK** or **COLOR: K**.
- 4 Use the tab **IMAGING** to choose object types depending on your original to be printed. Standard selection is **PRINTER SETTINGS**. Options are: **TEXT/GRAPHICS**, **TEXT/PHOTOS**, **VIVID COLORS**, **PUBLICATIONS**, **LINE ART** or **ADVANCED**.
- 5 Confirm with **OK**.



Cancel print job



- 1 Press **STATUS/JOB CANCEL**.
- 2 Press **PRINTING JOBS**.
- 3 Choose the job to be cancelled and press **CANCEL**.
- 4 Confirm with **YES**. Job is cancelled.

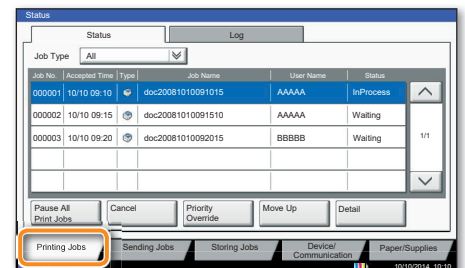


Copy operation

Preparation



 - 1 Place the originals on the platen or in the document processor.
- 2 Press **COPY** on the Home screen.
- 3 Enter the number of copies with the **TEN-KEY** pad.
- 4 Choose the copy mode.
- 5 Choose **PAPER SELECTION**, **DUPLEX**, **ZOOM**, **COMBINE**, **DENSITY** or **STAPLE/PUNCH** (optional) in the sub menu from the main screen.
- 6 Confirm all settings with **OK**.
- 7 Press **START**.

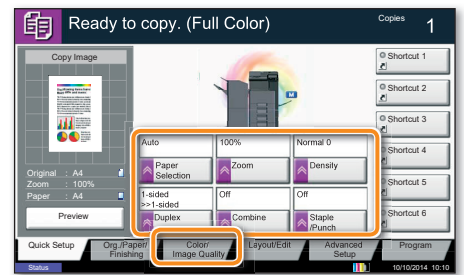

Optional Settings

Color settings:

- 1 Press **COLOR/IMAGE QUALITY**.
- 2 Choose **COLOR BALANCE**, **ONE-TOUCH IMAGE ADJUSTMENT**, **SHARPNESS**, **BACKGROUND ADJUSTMENT** in the sub menu from the main screen.

Quiet Mode:

- 1 Choose the register **ADVANCED SETUP**.
- 2 Press **QUIET MODE** on the touch screen.

Lower print and scan speed for quiet processing. Select this mode when the running noise is uncomfortable.

 
 
 
Changing paper source:

- 1 Press **PAPER SELECTION**.
- 2 Choose the desired paper format. When using special sizes or media types select the **MP TRAY**. Make sure that all MP settings are correct.

Staple/Punch (optional):

- 1 Press **STAPLE/PUNCH**.
- 2 Choose the desired function.

Confirm all settings with **OK**.

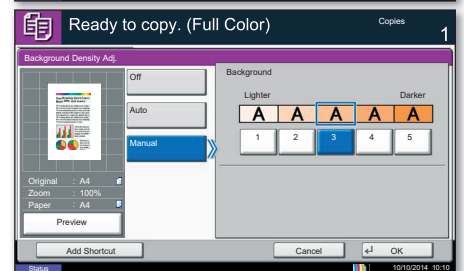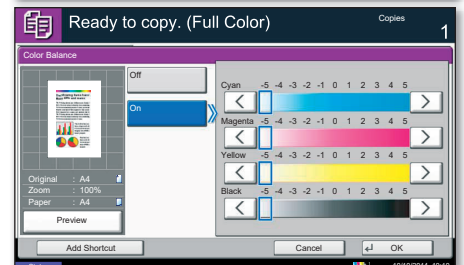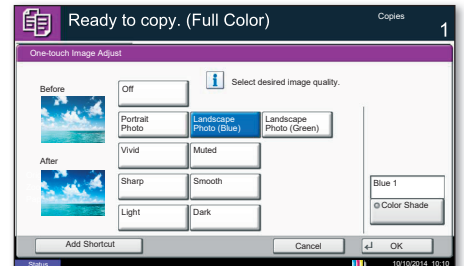

Help



A Help key is provided on this machine's operation panel. If you need further information about how to operate the machine and how to use its functions or if the machine is not working properly, press the Help key to view a detailed explanation on the touch panel.



For more details refer to the Operation Guide on the co-packed DVD.